

[See all 19 Products in Family](#)

## 10mm Aperture UV/VIS Fiber Optic Collimator, FC



Fiber Optic Collimator, FC (FC adapter inserted)



Stock **#88-191** [CONTACT US](#)

⊖ 1 ⊕ **£339<sup>20</sup>**

**ADD TO CART**

Volume Pricing	
Qty 1-10	£339.20 each
Qty 11-24	£299.20 each
Qty 25-49	£283.20 each
Need More?	<a href="#">Request Quote</a>

**!** Prices shown are exclusive of VAT/local taxes

### Product Downloads

### General

Fiber Collimator **Type:**  
0.22 **Compatible Fiber NA:**

Anodized Aluminum **Housing Material:**

**Note:**  
Compatible with #88-182, #88-183, #88-184, #88-185, #88-186, & #88-187 Refocusing Assemblies

## Physical & Mechanical Properties

15.88 **Diameter (mm):**

10.0 **Aperture Size:**

34.29 **Length (mm):**

## Optical Properties

**Substrate:**   
Fused Silica (Corning 7980)

190 - 1250 **Wavelength Range (nm):**

compatible 400 to 800 **Fiber Diameter (µm):**

18.00 **Focal Length FL (mm):**

## Hardware & Interface Connectivity

FC **Connector:**

## Environmental & Durability Factors

-40 to 100 **Operating Temperature (°C):**

## Regulatory Compliance

Compliant **RoHS 2015:**

Compliant **Reach 209:**

[View](#) **Certificate of Conformance:**

## Product Details

- Can Be Coupled to Standard 0.22 NA Fiber Optic Cables
- Options Available for UV-VIS or VIS-NIR
- Multiple Focal Length or Aperture Options


Focusable Collimators consist of two separate components: a fiber optic collimator and a fiber optic refocusing assembly. The fiber optic collimator utilizes a PCX lens positioned at the focal length from the optical fiber tip. These collimators are available with FC or SMA threads, and easily couple to standard 0.22 NA fiber optic cables. Focusable Collimators expand the beam and decrease the divergence by the ratio of the fiber core diameter to the collimator aperture. Fiber optic refocusing assemblies mount directly to the fiber optic collimator and allow for optimal focus at a given distance.

# LASER OPTICS MADE BY EDMUND OPTICS®

[LEARN MORE](#)


## Technical Information

### Fiber with 4mm Aperture Fiber Optic Collimator

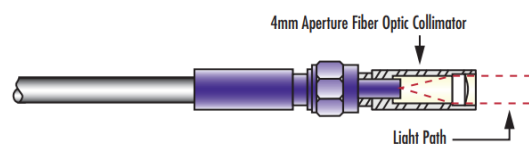

The 4mm Aperture Fiber Optic Collimator threads directly onto FC or SMA fiber.

### Fiber with 10mm Aperture Fiber Optic Collimator

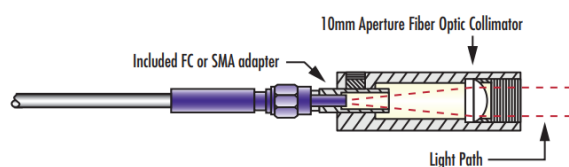

Each 10mm Aperture Fiber Optic Collimator includes an FC or SMA adapter that is inserted into the collimator and locked by a set screw.

**Fiber with 10mm Aperture Fiber Optic Collimator and Refocusing Assembly**



A 10mm Aperture Refocusing Assembly can then be directly threaded onto the 10mm Aperture Fiber Optic Collimator.

Collimator Description	Stock Number	Compatible Refocusing Assembly
4mm Aperture UV/MS Fiber Optic Collimator, FC	<a href="#">#88-189</a>	No Compatible Refocusing Assemblies
4mm Aperture UV/MS Fiber Optic Collimator, SMA	<a href="#">#88-173</a>	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, FC	<a href="#">#88-188</a>	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, SMA	<a href="#">#88-172</a>	No Compatible Refocusing Assemblies
10mm Aperture UV/MS Fiber Optic Collimator, FC	<a href="#">#88-191</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture UV/MS Fiber Optic Collimator, SMA	<a href="#">#88-181</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture VIS/NIR Fiber Optic Collimator, FC	<a href="#">#88-190</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture VIS/NIR Fiber Optic Collimator, SMA	<a href="#">#88-180</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>