

[See all 20 Products in Family](#)

## 25° Diffusing Angle 25mm Dia., Fused Silica Holographic Diffuser



UV Fused Silica Holographic Diffusers

Stock #48-509 **2 In Stock**

⊖ 1 ⊕ £399<sup>20</sup>

**ADD TO CART**

Volume Pricing	
Qty 1+	£399.20 each
Need More?	<a href="#">Request Quote</a>

**!** Prices shown are exclusive of VAT/local taxes

### Product Downloads

### General

Holographic Diffuser **Type:**

### Physical & Mechanical Properties

21.6 ±0.1 **Clear Aperture CA (mm):**

25.00 ±0.1 **Diameter (mm):**

**Construction:**

Mounted

## Optical Properties

±2.5 **Angle Tolerance (°):**

25 (FWHM) **Diffusing Angle (°):**

**Fused Silica** (Coming 7980) **Substrate:**

Typical: 90 **Transmission (%):**

400 - 700 **Wavelength Range (nm):**

## Threading & Mounting

5.00 +0.00/-0.35 **Mount Thickness (mm):**

## Environmental & Durability Factors

-40 to +170 **Operating Temperature (°C):**

## Regulatory Compliance

**Compliant** **RoHS 2015:**

**View** **Certificate of Conformance:**

**Compliant** **Reach 247:**

## Product Details




- Diffusing Angles Ranging from 0.5 - 50°
- Fused Silica Substrate Ideal for High Temperatures
- Homogenous Light Distribution
- **Standard Holographic Diffusers** Also Available

UV Fused Silica Holographic Diffusers are used to control the diffuse area of illumination and increase transmission efficiency to greater than 90% from filament lamps, LEDs, arc lamps, and other sources. These UV Fused Silica Holographic Diffusers use a fused silica substrate enabling their use at higher operating temperature than **polycarbonate holographic diffusers** and offer controlled, homogenous light distribution. It is important to note that diffusing angles are given for a collimated input beam and angular divergence will vary for different incidence angles.

Unlike many holographic elements, these specific fused silica components transmit light in the UV, visible, and near-infrared. Zero order, or a specular component, of transmitted light is less than 1% for visible wavelengths. Diffusers with wider diffusing angles (10 degree FWHM or wider) can also be used in an extended range of 200-1500nm, but those with lower diffusing angles are only recommended for use between 400-700nm.

**Note:** Matte surface should face the light source. To clean holographic diffusers, dampen a lint free cloth wipe with methanol and gently wipe the entire diffuser surface in a gentle, circular pattern. Immediately and carefully blow off the clean diffuser area with dry compressed air. Caution: cleaning may cause a change in the optical performance of the diffuser.

## Technical Information

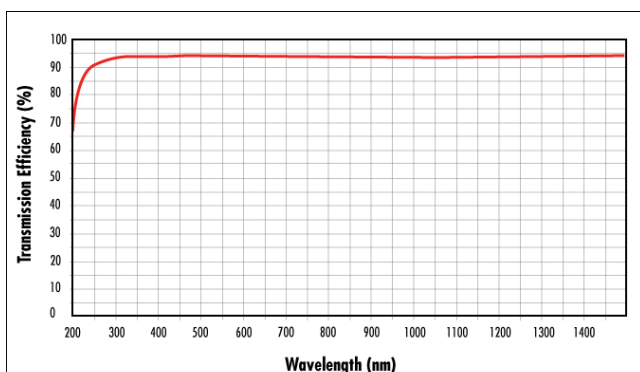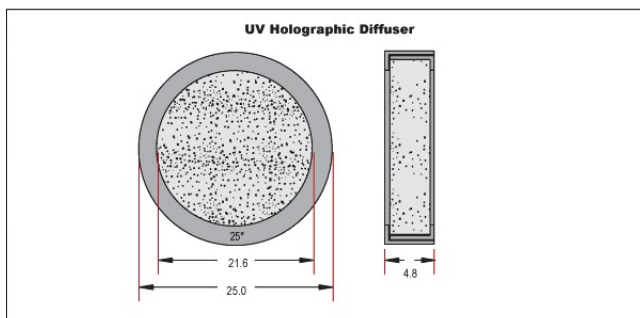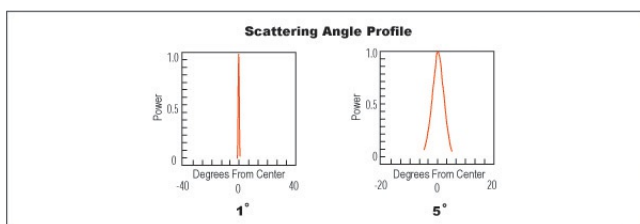

## Compatible Mounts

---