

[See all 6 Products in Family](#)

TECHSPEC®

405nm Laser Line Coated, Unmounted Anamorphic Prism Pair



#65-933 405nm Laser Line Coated, Unmounted Anamorphic Prism Pair

Stock **#65-933** 8 In Stock

-

1

+

£186⁴⁰

ADD TO CART

Volume Pricing	
Qty 1-5	£186.40 each
Qty 6-25	£168.00 each
Qty 26-49	£149.60 each
Need More?	Request Quote

Prices shown are exclusive of VAT/local taxes

Product Downloads

General

Type:

Beam Shaping

Physical & Mechanical Properties

Dimensional Tolerance (mm):

+0.00/-0.10

Optical Properties	
Laser V-Coat (405nm)	Coating:
405	Design Wavelength DWL (nm):
N-SF11	Substrate: □
2X-6X (Depends on Mounting Configuration)	Magnification:
20-10	Surface Quality:
3	Angle Tolerance (arcmin):
R _{abs} <0.25% @ 405nm R _{avg} <1.5% @ 375 - 435nm	Coating Specification:
3.00	Power (fringes) @ 632.8nm:
1.00	Irregularity (fringes) @ 632.8nm:
Threading & Mounting	
Unmounted	Mount:
Regulatory Compliance	
View	Certificate of Conformance:

Product Details

- Converts Elliptical Beam to Circular
- Anti-Reflection Coated for Common Diode Wavelengths
- Mounted and Unmounted Versions Available

An anamorphic prism pair is used to expand a laser beam in one dimension. This makes it ideal for converting the elliptical beam shape of laser diodes into a nearly circular one. Mounting our unmounted anamorphic prism pair in the proper orientation will provide magnification ratios from 2:1 - 6:1. Designed at 650nm and broadband anti-reflection (BBAR) coated for 600 – 1050nm, it provides excellent performance at both 635nm and 670nm.

The center of the output beam is displaced 5.9mm from center of the input beam in our mounted anamorphic prism pair. The Dovetail Accessory Mount allows it to rotate with respect to the laser, simplifying bench-top mounting. The C-Accessory Mount allows our full line of [C-Mount components](#) to be used in conjunction with the mounted anamorphic prism pair.


LASER OPTICS

MADE BY EDMUND OPTICS®



LEARN MORE


Technical Information

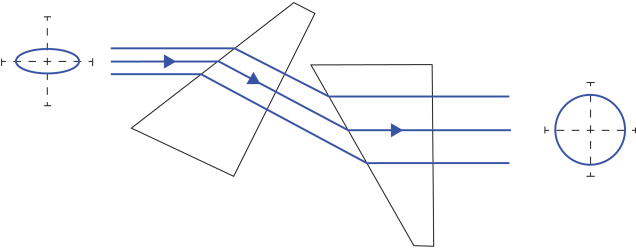


Ray path for anamorphic prism pairs, showing transformation of elliptical beam to circular beam

Typical Values				
Magnification	α1	α2	Vertical Separation (V)	Beam Displacement (D)
2X	-20.6°	-6.5°	1.75mm	4.50mm
3X	-29.7°	-0.9°	2.56mm	5.45mm
4X	-34.1°	2.1°	3.01mm	5.74mm
5X	-37.4°	3.2°	3.33mm	6.15mm
6X	-39.7°	4.0°	3.51mm	6.42mm

Anamorphic Prism Pair

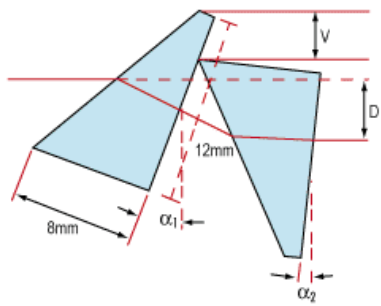

Magnification vs. Prism Angles

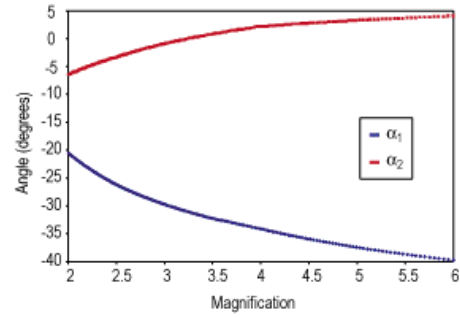

Beam Expander Mounting Configurations.

Click on an item below to be brought to that item's product page.

