

## 4mm Aperture VIS/NIR Fiber Optic Collimator, SMA



4mm Aperture Fiber Optic Collimator, SMA

Stock **#88-172** **4 In Stock**

⊖ 1 ⊕ £156<sup>00</sup>

**ADD TO CART**

### Volume Pricing

Qty 1-10	£156.00 each
Qty 11-24	£137.60 each
Qty 25-49	£129.60 each
Need More?	<a href="#">Request Quote</a>

ⓘ Prices shown are exclusive of VAT/local taxes

### Product Downloads

### General

Fiber Collimator **Type:**  
0.22 **Compatible Fiber NA:**  
Stainless Steel **Housing Material:**

No Compatible Refocusing Assemblies **Note:**

## Physical & Mechanical Properties

6.35 **Diameter (mm):**

4.0 **Aperture Size:**

23.37 **Length (mm):**

## Optical Properties

**N-BK7** **Substrate:**

350 - 2200 **Wavelength Range (nm):**

compatible up to 400 **Fiber Diameter ( $\mu\text{m}$ ):**

10.00 **Focal Length FL (mm):**

## Hardware & Interface Connectivity

SMA **Connector:**

## Environmental & Durability Factors

-40 to 100 **Operating Temperature ( $^{\circ}\text{C}$ ):**

## Regulatory Compliance

**Compliant** **RoHS 2015:**

**Compliant** **Reach 209:**

**View** **Certificate of Conformance:**

## Product Details

- Can Be Coupled to Standard 0.22 NA Fiber Optic Cables
- Options Available for UV-VIS or VIS-NIR
- Multiple Focal Length or Aperture Options


Focusable Collimators consist of two separate components: a fiber optic collimator and a fiber optic refocusing assembly. The fiber optic collimator utilizes a PCX lens positioned at the focal length from the optical fiber tip. These collimators are available with FC or SMA threads, and easily couple to standard 0.22 NA fiber optic cables. Focusable Collimators expand the beam and decrease the divergence by the ratio of the fiber core diameter to the collimator aperture. Fiber optic refocusing assemblies mount directly to the fiber optic collimator and allow for optimal focus at a given distance.

# LASER OPTICS MADE BY EDMUND OPTICS®

[LEARN MORE](#)


## Technical Information

### Fiber with 4mm Aperture Fiber Optic Collimator

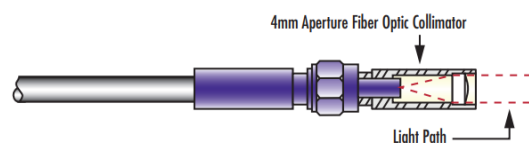

The 4mm Aperture Fiber Optic Collimator threads directly onto FC or SMA fiber.

### Fiber with 10mm Aperture Fiber Optic Collimator

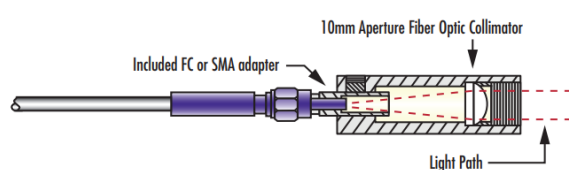

Each 10mm Aperture Fiber Optic Collimator includes an FC or SMA adapter that is inserted into the collimator and locked by a set screw.

**Fiber with 10mm Aperture Fiber Optic Collimator and Refocusing Assembly**



A 10mm Aperture Refocusing Assembly can then be directly threaded onto the 10mm Aperture Fiber Optic Collimator.

Collimator Description	Stock Number	Compatible Refocusing Assembly
4mm Aperture UV/MS Fiber Optic Collimator, FC	<a href="#">#88-189</a>	No Compatible Refocusing Assemblies
4mm Aperture UV/MS Fiber Optic Collimator, SMA	<a href="#">#88-173</a>	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, FC	<a href="#">#88-188</a>	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, SMA	<a href="#">#88-172</a>	No Compatible Refocusing Assemblies
10mm Aperture UV/MS Fiber Optic Collimator, FC	<a href="#">#88-191</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture UV/MS Fiber Optic Collimator, SMA	<a href="#">#88-181</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture VIS/NIR Fiber Optic Collimator, FC	<a href="#">#88-190</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>
10mm Aperture VIS/NIR Fiber Optic Collimator, SMA	<a href="#">#88-180</a>	<a href="#">#88-182</a> , <a href="#">#88-183</a> , <a href="#">#88-184</a> , <a href="#">#88-185</a> , <a href="#">#88-186</a> , & <a href="#">#88-187</a>