

5° Diffusing Angle 50mm Dia., Fused Silica Holographic Diffuser



UV Fused Silica Holographic Diffusers

Stock **#48-515** **2 In Stock**

-

1

+

£656⁰⁰

ADD TO CART

Volume Pricing	
Qty 1+	£656.00 each
Need More?	Request Quote

i Prices shown are exclusive of VAT/local taxes

Product Downloads

General

Holographic Diffuser

Type:

Physical & Mechanical Properties

45.7 ±0.1

Clear Aperture CA (mm):

50.00 ±0.1

Diameter (mm):

Construction:

Mounted	
Optical Properties	
±1	Angle Tolerance (°):
5 (FWHM)	Diffusing Angle (°):
Fused Silica (Corning 7980)	Substrate: ☐
Typical: 90	Transmission (%):
400 - 700	Wavelength Range (nm):
Threading & Mounting	
5.00 +0.00/-0.35	Mount Thickness (mm):
Environmental & Durability Factors	
-40 to +170	Operating Temperature (°C):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	Reach 247:

Product Details


- Diffusing Angles Ranging from 0.5 - 50°
- Fused Silica Substrate Ideal for High Temperatures
- Homogenous Light Distribution
- [Standard Holographic Diffusers](#) Also Available

UV Fused Silica Holographic Diffusers are used to control the diffuse area of illumination and increase transmission efficiency to greater than 90% from filament lamps, LEDs, arc lamps, and other sources. These UV Fused Silica Holographic Diffusers use a fused silica substrate enabling their use at higher operating temperature than [polycarbonate holographic diffusers](#) and offer controlled, homogenous light distribution. It is important to note that diffusing angles are given for a collimated input beam and angular divergence will vary for different incidence angles.

Unlike many holographic elements, these specific fused silica components transmit light in the UV, visible, and near-infrared. Zero order, or a specular component, of transmitted light is less than 1% for visible wavelengths. Diffusers with wider diffusing angles (10 degree FWHM or wider) can also be used in an extended range of 200-1500nm, but those with lower diffusing angles are only recommended for use between 400-700nm.

Note: Matte surface should face the light source. To clean holographic diffusers, dampen a lint free cloth wipe with methanol and gently wipe the entire diffuser surface in a gentle, circular pattern. Immediately and carefully blow off the clean diffuser area with dry compressed air. Caution: cleaning may cause a change in the optical performance of the diffuser.

Technical Information

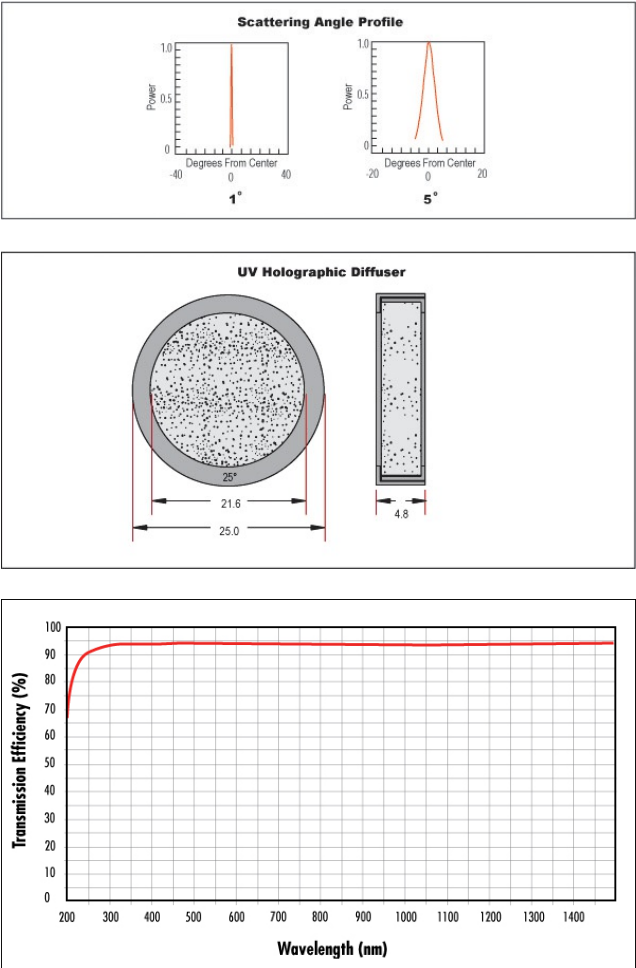

Compatible Mounts

;