

80° Diffusing Angle 12.5mm Unmounted



Stock **#35-870** [CONTACT US](#)

-

1

+

£79^{.20}

ADD TO CART

Volume Pricing	
Qty 1-5	£79.20 each
Qty 6+	£62.40 each
Need More?	Request Quote

!

 Prices shown are exclusive of VAT/local taxes

Product Downloads

General

Type:

Holographic Diffuser

Physical & Mechanical Properties

12.50	Diameter (mm):
±0.5	Dimensional Tolerance (mm):


0.78	Thickness (mm):
Unmounted	Construction:
Optical Properties	
±8	Angle Tolerance (°):
80 (FWHM)	Diffusing Angle (°):
Polycarbonate	Substrate: ☐
>85	Transmission (%):
400 - 700	Wavelength Range (nm):
0.22 J/cm ² @ 1064nm, 10ns (typical)	Damage Threshold, By Design: ☐


Environmental & Durability Factors	
-30 to +100 (Maximum of 240 Hours)	Operating Temperature (°C):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	Reach 247:

Product Details


- Transmission Efficiency>85%
 - Elliptical and Circular Diffusing Outputs
 - Ideal for Visible and Near-Infrared Applications
 - [UV Holographic Diffusers](#) Also Available
- Holographic Diffusers are used to control the diffuse area of illumination and increase transmission efficiency to greater than 90% from filament lamps, LEDs, arc lamps, and other sources. [Standard ground glass](#) and [opal glass](#) will produce diffuse illumination, but the diffuse light area will often exceed the requirements of the system. This over-illumination, associated with traditional diffusers, reduces efficiency and can often lead to added costs by requiring higher power illumination sources, lenses, and possibly filters. It is important to note that diffusing angles are given for a collimated input beam and angular divergence will vary for different incidence angles.
- Unlike many holographic elements, these specific polycarbonate components transmit light in both the visible and near-infrared. Zero order, or a specular component, of transmitted light is less than 1% for visible wavelengths, but maybe higher if these diffusers are used at wavelengths >700nm. Available individually, as umounted sheets, or in sets of four filters. Holographic Diffusers can be cleaned with a de-ionized water rinse, followed by a forced air drying. Wipe gently with lens tissue soaked with methanol, followed with a forced clean air or nitrogen drying. Holographic Diffusers are resistant to methanol and methylene chloride.
- Note:** Matte surface should face the light source. To clean holographic diffusers, dampen a lint free cloth wipe with methanol and gently wipe the entire diffuser surface in a gentle, circular pattern. Immediately and carefully blow off the clean diffuser area with dry compressed air. Caution: cleaning may cause a change in the optical performance of the diffuser.

Technical Information

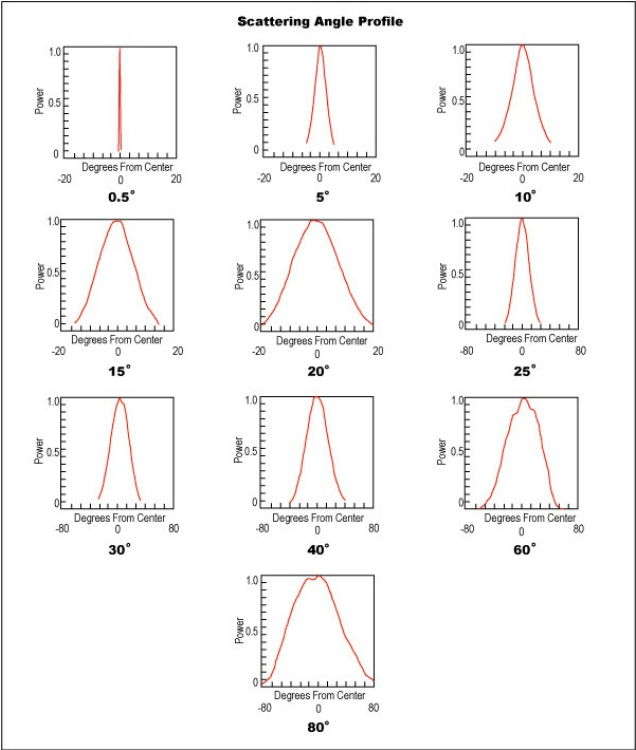

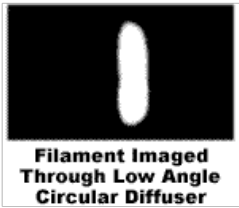


Filament Imaged Through Low Angle Circular Diffuser

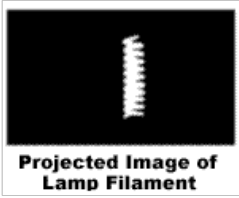

Projected Image of Lamp Filament



Filament Imaged Through Elliptical Diffuser

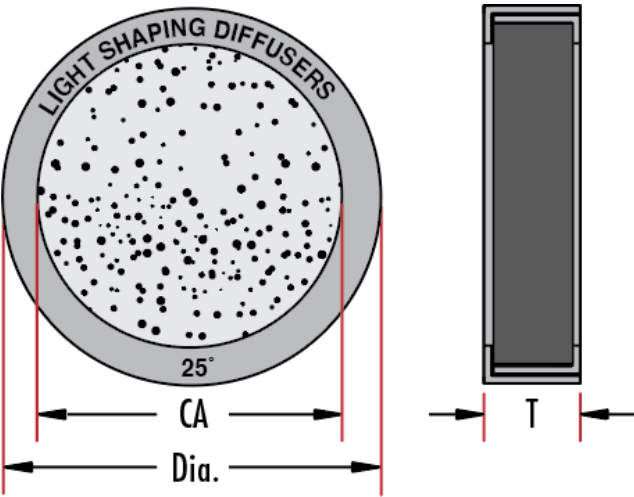

Compatible Mounts